



II. Basic Operations

D. Deactivate or Edit Route on Map, Add and Remove Waypoints.

1. With a route active and the Active Route Page showing, PRESS to display the window shown to the right.
2. Use the UP and DOWN arrows on the Rocker Keypad to highlight the desired selection.
3. PRESS to perform the chosen option.
4. PRESS to close the window.

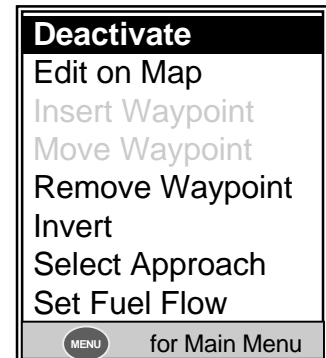

Deactivate: This selection will deactivate the active route and show a blank Active Route page. NOTE: If a route is not active, the selection “**Deactivate**” is not shown.

Edit on Map: This allows you to easily add or remove waypoints from the route. To remove or add a waypoint, PRESS to begin the process. This shows a map with the Panning Arrow  at your present position. Use the IN and OUT buttons and the Rocker Keypad to position the Arrow over desired waypoint.

To remove a waypoint place the Panning Arrow over it and PRESS , select “Remove” and PRESS . The screen reverts to the map with the Panning Arrow over the next waypoint in the route. PRESS to revert back to the Active Route page.


To add a waypoint place the Panning Arrow anywhere over the route leg where the waypoint is to be added. When the leg is highlighted (changes color) PRESS . This ties the Panning Arrow and route leg together. Use the Rocker Keypad to drag the course line over to the spot to be added and PRESS . If the new waypoint is in the data base it will be inserted into the Route. If the new waypoint is not in the data base the “New Waypoint” window appears with the “OK” button highlighted. If you PRESS this waypoint will also be added to the User Waypoint list.

Insert Waypoint: (At end of route) PRESS to bring up the Find Page with the Identifier field highlighted. PRESS and “Type in” the identifier of the desired waypoint or use the Rocker Keypad to choose the “Recent” or “User” tabs and select desired waypoint. To add the waypoint, highlight “OK” and PRESS . This also renames the Active Route.

(Within the route) Follow the above steps except first highlight the waypoint you want to follow the to-be-added waypoint.

Remove Waypoint: It is dimmed in this example because a waypoint is not selected. To use this option, first use the Rocker Keypad to highlight a waypoint (STONS) when the Active Route page is still showing. PRESS . The “Remove Waypoint” option is now available.

Use the Rocker Keypad to highlight the option and PRESS . A window appears to ask if you really want to remove the waypoint. Choose “Yes” or “No” and PRESS . PRESS to deactivate the cursor and stay on the Active Route Page.

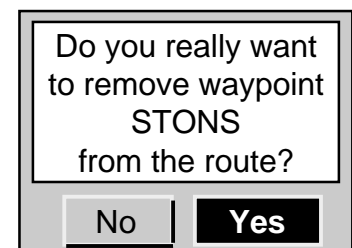

(The Active Route Menu Functions are continued on next page.)